RAMP PARTS

- TOP
- BOTTOM



2–LEGS

2–INSERTS

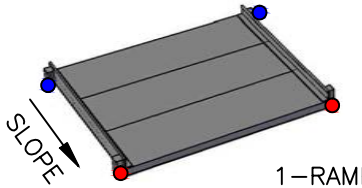

1–RAMP

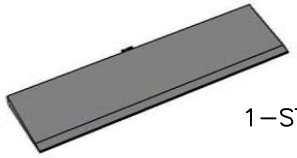

1–STARTER

TOOLS NEEDED

* RATCHET
* DRILL WITH 3/8" NUT DRIVER

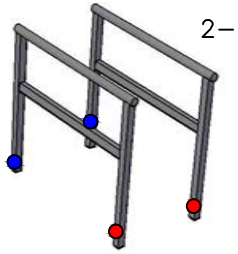

2–HANDRAILS

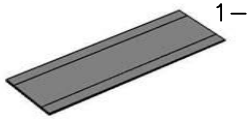

1–PLATE

4–1/2"X9/16SS BOLT

10–#14X1" TEK SCREW

ASSEMBLY INSTRUCTIONS

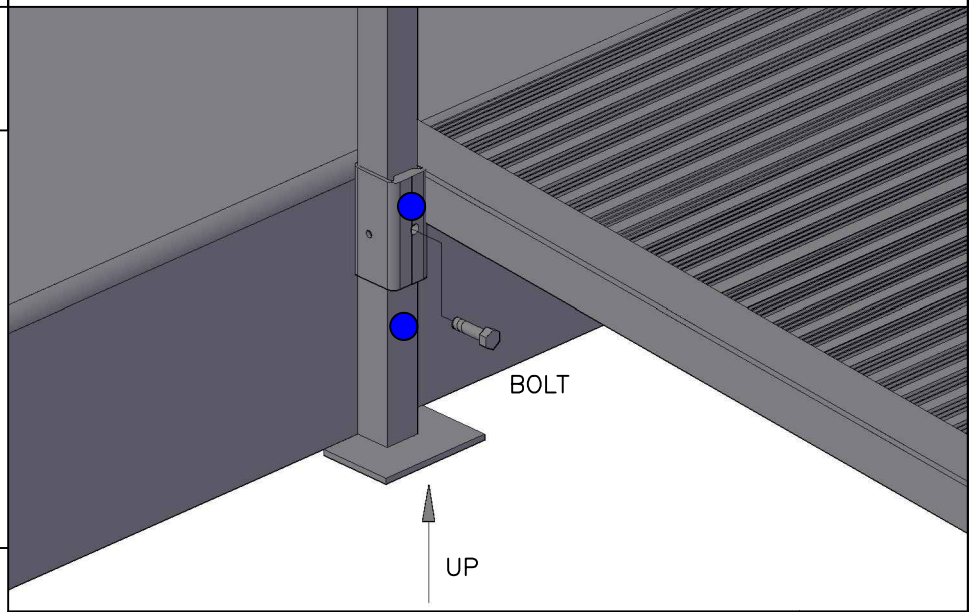

STEP 2. ALIGN BLUE STICKERS, THEN INSERT LEGS FROM BOTTOM TO TOP THROUGH RAMP SOCKET. USE RATCHET TO INSTALL 1/2"X9/16"SS BOLT THROUGH PRE–THREADED HOLE TO SECURE LEG. ADJUST LEG AS NEEDED TO MATCH HEIGHT OF THRESHOLD OR STEP.

- TOP
- BOTTOM

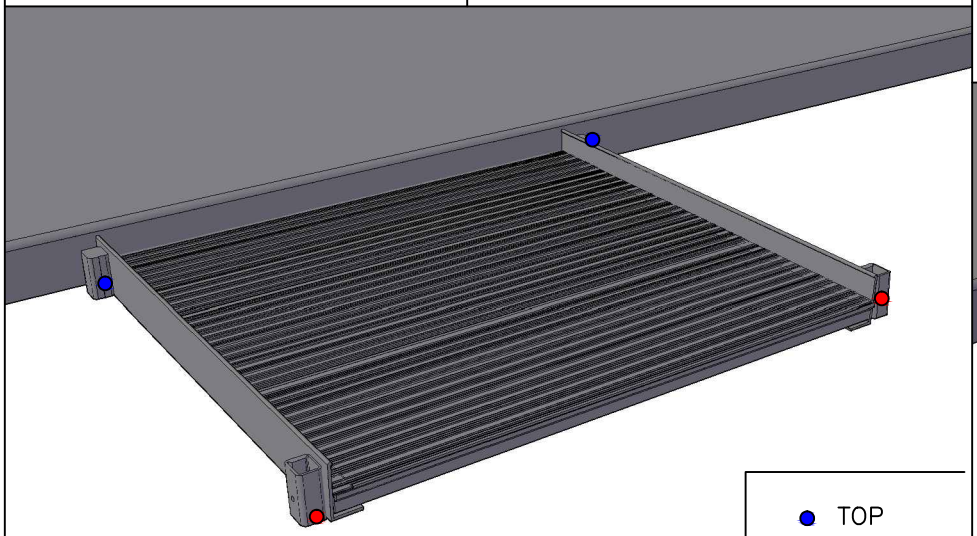

- TOP
- BOTTOM

STEP 1. POSITION RAMP IN FRONT OF DOOR, FIND BLUE STICKER AND PLACE TOWARD DOOR.

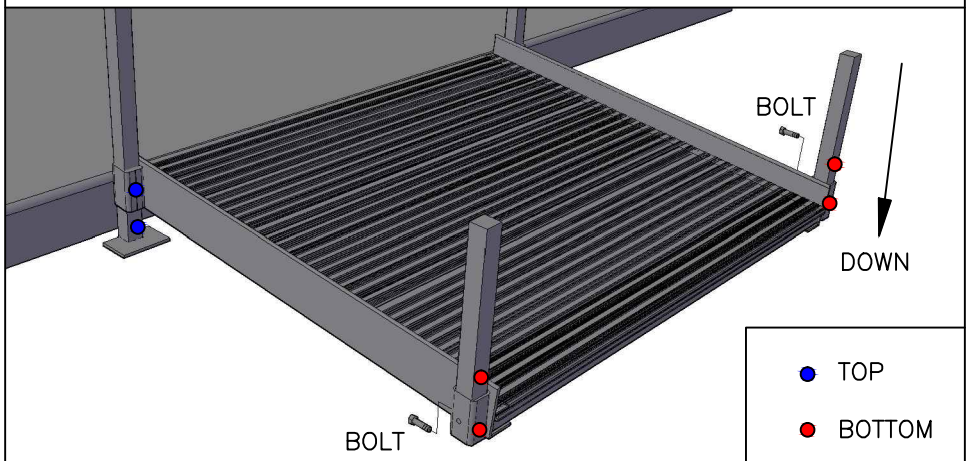

- TOP
- BOTTOM

STEP 3. ALIGN RED STICKERS, THEN SLIDE INSERT FROM TOP TO BOTTOM THROUGH RAMP SOCKET. USE RATCHET TO INSTALL 1/2"X9/16" SS BOLT THROUGH PRE–THREADED HOLE TO SECURE INSERT.

STEP 4. ALIGN BLUE AND RED STICKERS THEN SLIDE HANDRAIL ALL THE WAY DOWN FLUSH TO RAMP SOCKET OVER LEGS AND INSERTS AS SHOWN. (DO NOT FORCE HANDRAIL DOWN)

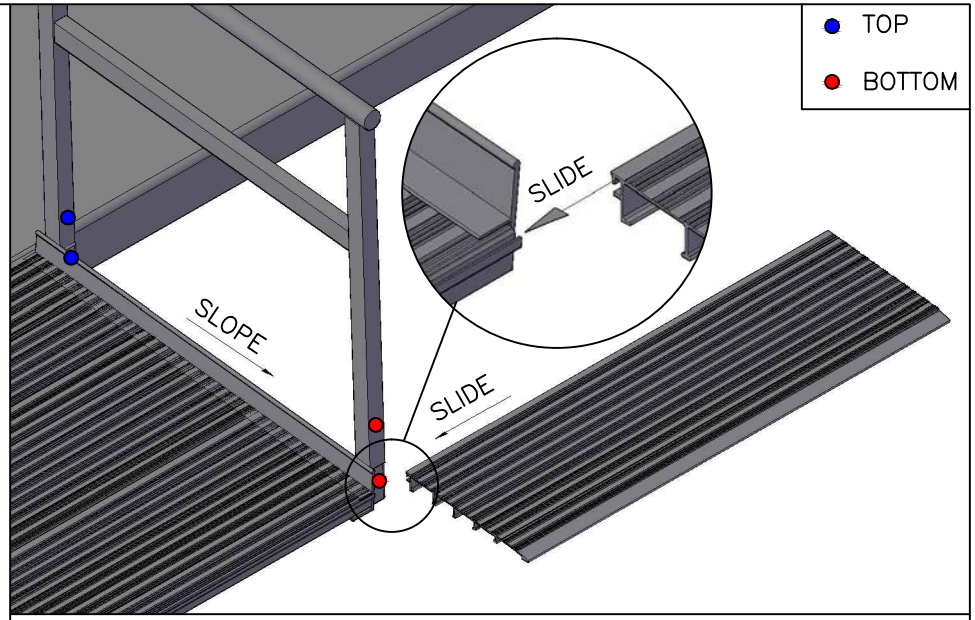

STEP 5. SLIDE STARTER ONTO GROOVE, START FROM ONE SIDE SLIDE ACROSS.

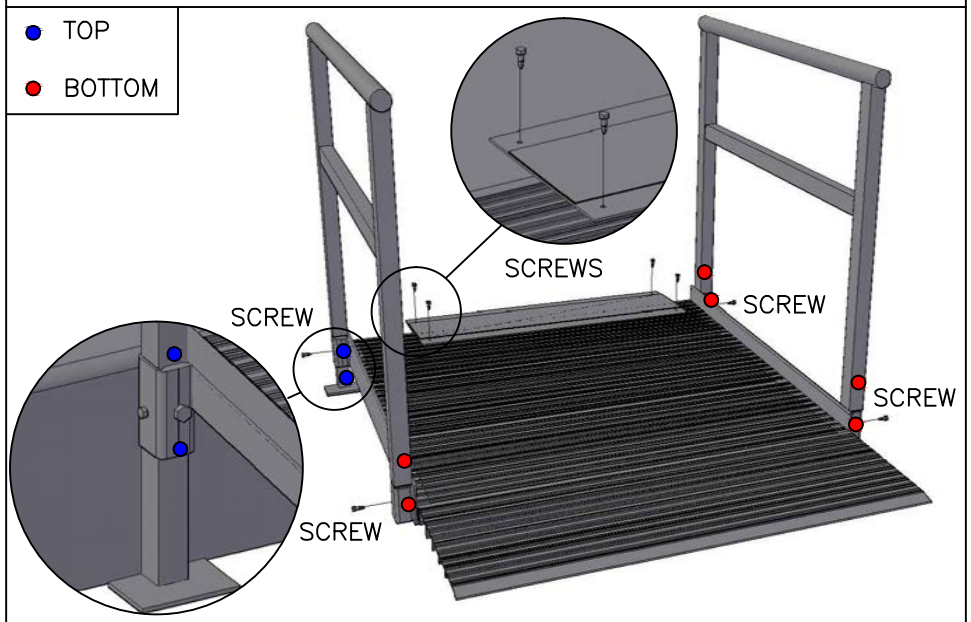

STEP 6. TIGHTEN ALL BOLTS. USE DRILL WITH 3/8" NUT DRIVER TO DRILL IN ALL SCREWS AS SHOWN. PLACE TRANSITION PLATE SO IT WILL NOT INTERFERE WITH DOOR SWING THEN DRILL AND SCREW THROUGH THRESHOLD AND RAMP FOR A SMOOTH TRANSITION. (ONLY INSTALL TRANSITION PLATE IF NEEDED)